



Model: IND-2065
6.5" DOUBLE DIN CAR STEREO



USER MANUAL
V1.2

Bravo View Technology
20153 Paseo Del Prado
Walnut, California 91789
United States of America
909-869-0699
www.bravoview.com




TABLE OF CONTENTS

Front Panel	1
General operation	2
Radio function	3
DVD disc reader function	4
CD changer function	5
External function	6
RGB	6
Power on/off	7
Volume control	8
Radio screen	9
Radio operation	10
DVD reader operation	11
CD changer menu operation	12
OSD operation	13
Remote control operation maunal	17
Other buttons operation	17
CCD Back up camera operation	18
Basic installation	19
Installation Instruction	20
Accessories	21

MENU

FRONT PANEL

 IND-2065

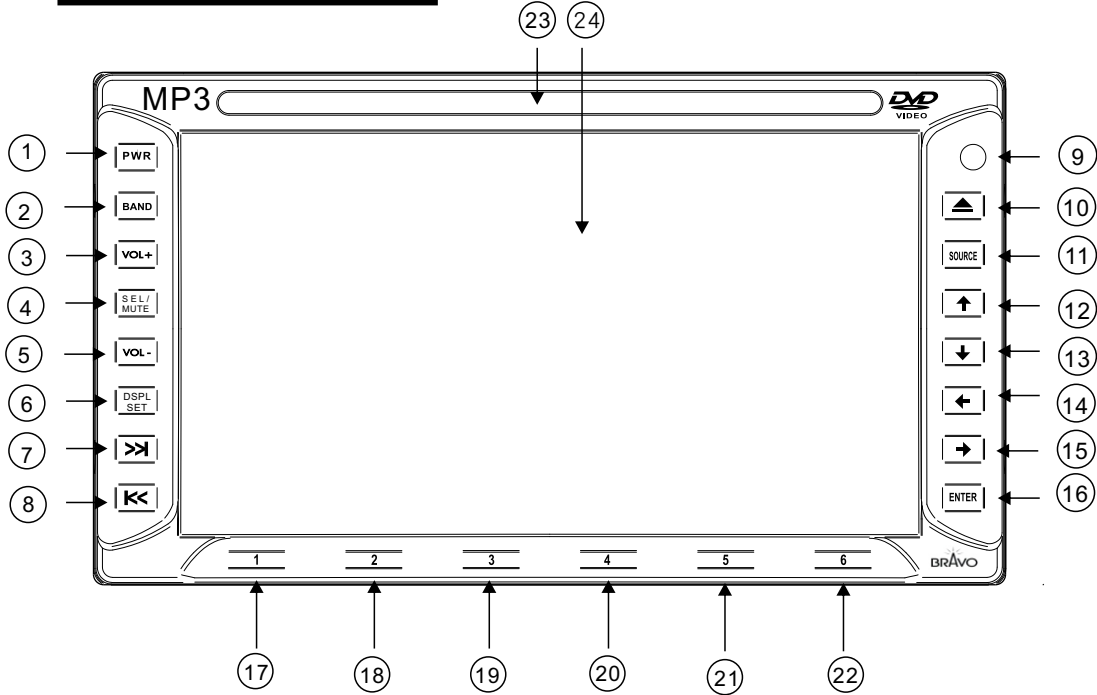


- | | |
|--|---|
| ① PWR: power ON/OFF | ⑬ ↓ : Menu goes down |
| ② BAND: Band(AM/FM)selection | ⑭ ← : Menu goes left |
| ③ VOL+: Volume control, increase | ⑮ → : Menu goes right |
| ④ SEL / MUTE : Frequency selection | ⑯ ENTER : Menu function confirmation |
| ⑤ VOL-: Volume control, decrease | ⑰ Preset band 1/ ▶/ disc playing/pause |
| ⑥ DESP SET: Date/time display | ⑱ Preset band 2/ ■ disc playing/stop |
| ⑦ >> Band frequency increases/disc goes down | ⑲ Preset band 3/ ◀◀ go back to the last track |
| ⑧ ◀◀ : Band frequency decreases/disc goes up | ⑳ Preset band 4/ ▶▶ go to the next track |
| ⑨ IR receiver window | ㉑ Preset band 5/TITLE goes back to the initial playing position |
| ⑩ ▲ Disc eject | ㉒ Preset band 6/MENU goes to menu function |
| ⑪ SOURCE: Playback function selection | ㉓ Disc Input |
| ⑫ ↑: Menu goes up | ㉔ Lcd Display |


GENERAL OPERATION

PWR	Power ON/OFF	
VOL+	Increase the volume	
SEL /MUTE	Set up volume adjustment function (accompanied with VOL+ /VOL- for adjustment)	
	Preset	VOLUME main volume adjustment, 0 to 48
	Press 2 times	BASS: Bass adjustment +8 to -8
	Press 3 times	TREBLE: Treble adjustment +8 to -8
	Press 4 times	FADER: front and back volume adjustment F8 to R8
	Press 5 times	BALANCE: left and right volume adjustment R8 to L8
	Press 6 times	Go back to preset (VOLUME: main volume adjustment)
Press for a long time	Mute function	
VOL-	Decrease volume	
DSPL SET	Time and date display and setup	
▲	Press for 3 seconds to turn off LCD screen.	


VOLUME

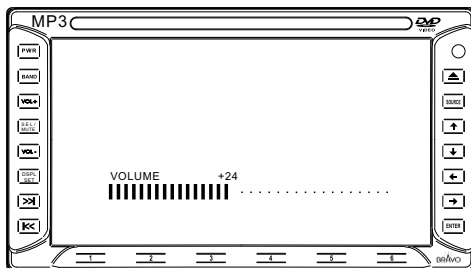


BALANCE

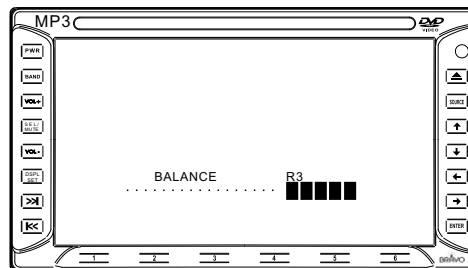


TREBLE

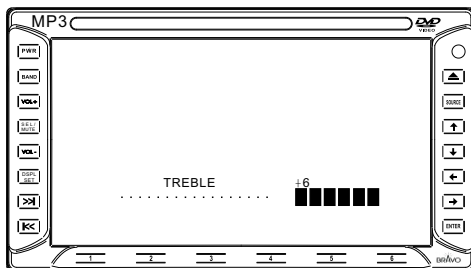


BASS

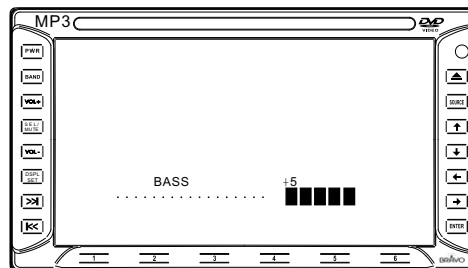

FADER

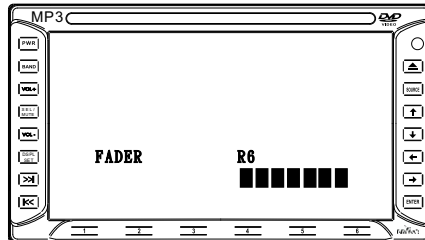


RADIO FUNCTION

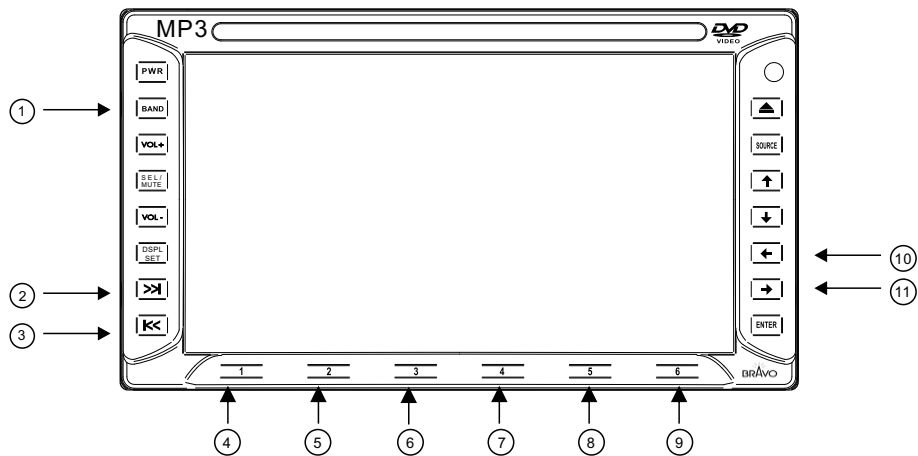

①	BAND	Enter to switch the radio channel
②	➤➤	Search for next channel manually (or press for a long time to search for the next channel)
③	⏪	Search for next channel manually (or press for a long time to search for the last channel)
④	1	Channel fast selection or press for 3 seconds to present current radio station
⑤	2	Channel fast selection or press for 3 seconds to present current radio station
⑥	3	Channel fast selection or press for 3 seconds to present current radio station
⑦	4	Channel fast selection or press for 3 seconds to present current radio station
⑧	5	Channel fast selection or press for 3 seconds to present current radio station
⑨	6	Channel fast selection or press for 3 seconds to present current radio station
⑩	⏪	Automatic search for the last channel
⑪	➡	Automatic search for the next channel


DVD DISC READER FUNCTION

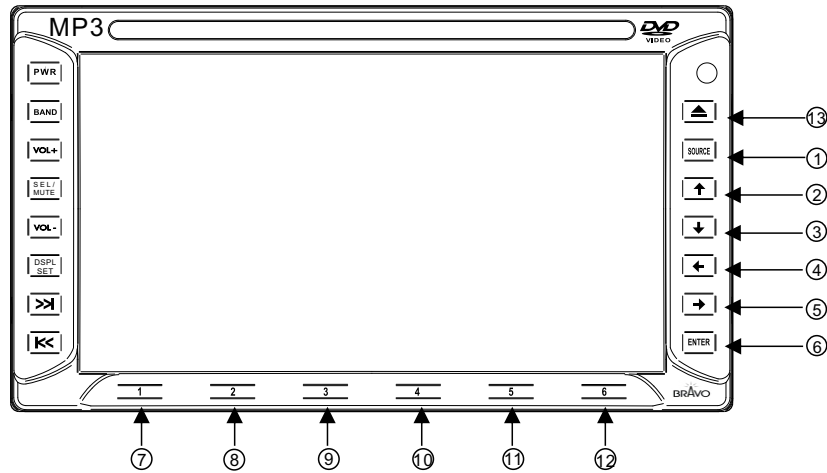

①	SOURCE	Enter DVD disc changer function (Please turn on the power after it has been installed)
②	↑	DVD menu goes up (The function depends on the disc)
③	↓	DVD menu goes down (The function depends on the disc)
④	←	DVD menu goes left (The function depends on the disc)
⑤	→	DVD menu goes right (The function depends on the disc)
⑥	ENTER	DVD menu execution (The function depends on the disc)
⑦	▶/	Play the video or pause
⑧	■	Pause or stop the playing
⑨	⏮	Last section or last song or for rewinding
⑩	⏭	Next section or next song or for forwarding
⑪	TITLE	Playback from the start
⑫	MENU	Menu of functions
⑬	▲	Change the optical disc

Note: This function only works when an optional changer is installed.

CD CHANGER FUNCTION 《OPTIONAL》

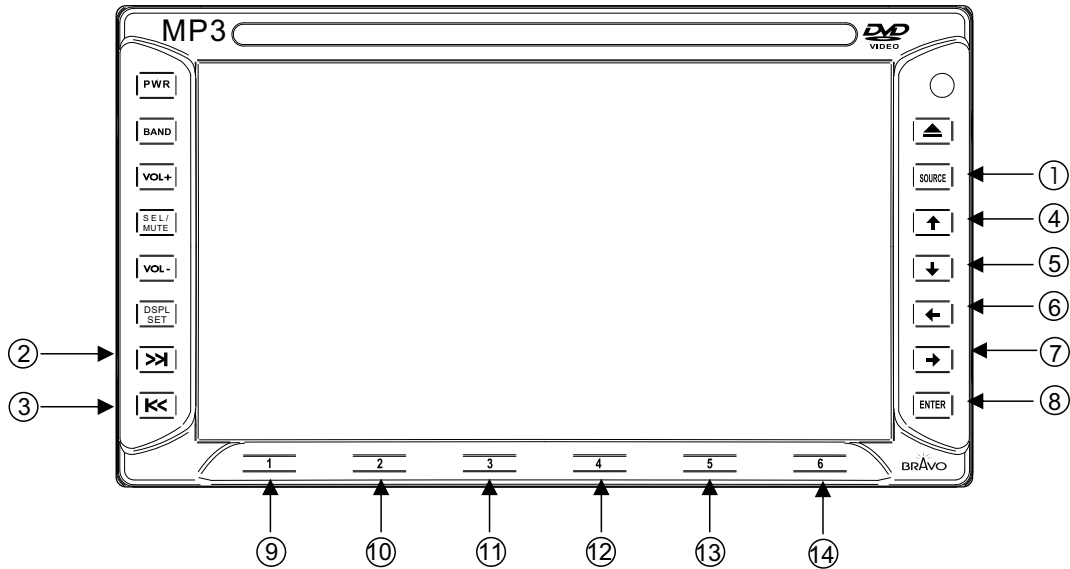

①	SOURCE	Enter CD changer function (Please turn on the power after it has been installed)
②	▶▶	Next disc 1→2→3→4.....
③	◀◀	Last disc 10→9→8→7.....
④	↑	DVD menu goes up (The function depends on the disc)
⑤	↓	DVD menu goes down (The function depends on the disc)
⑥	→	DVD menu goes left (The function depends on the disc)
⑦	←	DVD menu goes right (The function depends on the disc)
⑧	ENTER	DVD menu execution (The function depends on the optical disc)
⑨	▶/	Last section or last song or press for 3 seconds for rewarding
⑩	■	Pause or stop the playing
⑪	◀◀	Last section or last song or press for a long time for rewarding
⑫	▶▶	Next section or next song or press for a long time for forwarding
⑬	TITLE	Playback from the start
⑭	MENU	Menu of functions

- Insert the optical disc under any non-DVD function (such as receiving RADIO), it will jump immediately to DVD function.
- Notice: If there is already optical disc in the DVD, you can only use FUNC button to enter DVD.
In order to protect the machine, when you leave the DVD Source, you can not enter DVD again within 5 seconds.

EXTERNAL FUNCTION

SOURCE	CD CHANGER/AUX1/AUX2
--------	----------------------

 
RGB

1. Press **SOURCE** button for 3 seconds to enter RGB display source directly, screen will be switched to RGB .

POWER ON/OFF


Power on:

1. Start the engine of the car.
2. Press **PWR** button to turn on the machine.
3. Press **SOURCE** to play the radio.
4. Press **SOURCE** button to play the DVD disc reader.
5. Press **SOURCE** button to play disc changer
(This function will not be available if it is not connected to disc changer).
6. Press **SOURCE** button repeatedly to play the external AUX signal.

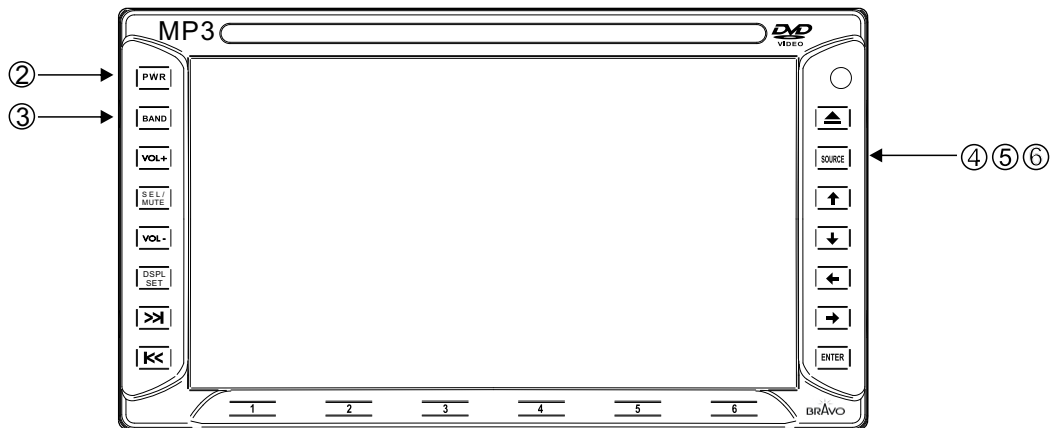

Power off:

1. Press **PWR** button to turn off the machine.

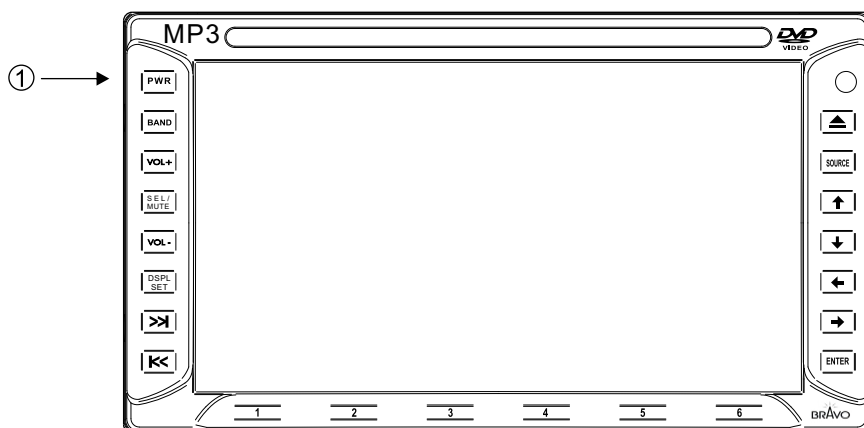

VOLUME CONTROL

Main volume adjustment:

1. Press **VOL+** to increase the volume.
2. Press **VOL-** to decrease the volume.

Bass adjustment:

1. Press **SEL / MUTE** to switch to bass.
2. Press **VOL+** to strengthen bass.
3. Press **VOL-** to weaken bass.

Treble adjustment:

1. Press **SEL / MUTE** to switch to TREBLE.
2. Press **VOL+** to strengthen TREBLE.
3. Press **VOL-** to weaken TREBLE.

Front and back volume ratio adjustment:

1. Press **SEL / MUTE** to switch to FADER.
2. Press **VOL+** to increase right speaker volume.
3. Press **VOL-** to decrease right speaker volume.

Left and right volume ratio adjustment:

1. Press **SEL / MUTE** to switch to BALANCE.
2. Press **Vol +** to increase right volume channel output power to more than left channel.
3. Press **Vol -** to decrease left volume channel output power to more than right channel Loudness.

Loudness adjustment:


Press **SEL / MUTE** for 3 seconds to enter the menu, press **3** to enter **AUDIO** menu, press **↓** to **LOUDNESS**, then press **←** or **→** switch.

RADIO SCREEN

- ① Date display.
- ② Time display.
- ③ MONO/STEREO broadcasting indication.
- ④ Band indication.

FM1	First FM band.
FM2	Second FM band.
FM3	Third FM band.
AM1	First AM band.
AM2	Second AM band.

- ⑤ Fast band search indicator.
- ⑥ FM micro adjustment indication.
- ⑦ Reception frequency indication.
- ⑭ Indication of signal strength or search progress table.
- ⑧ ~ ⑬ Indication of band frequency.

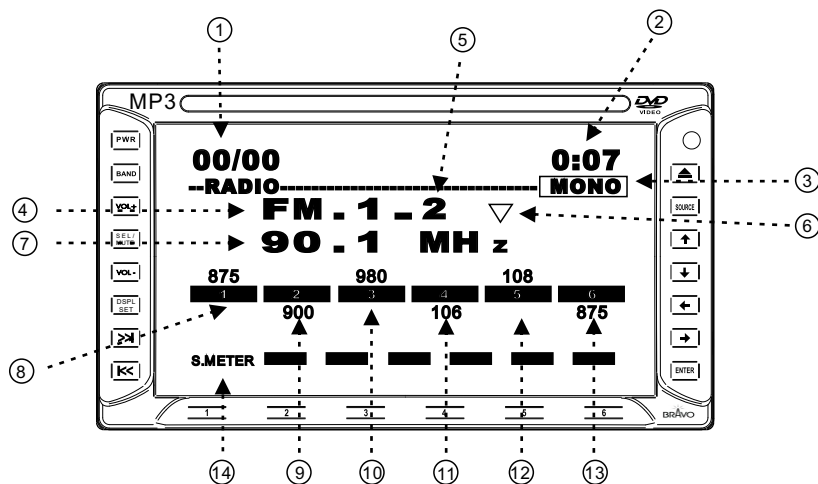


RADIO OPERATION

1. Turn the power on.
2. Press **BAND** to enter radio mode.
3. Press TUNE **>>** to search forward for the band.
4. Press TUNE **<<** for 3 seconds or **→** it will search forward for available bands.
5. Press TUNE **▼** to search backward for the band.
6. Press TUNE **▼** for 3 seconds or **←**, it will search backward for available bands.
7. To save your favorite radio station tune into it, press and hold **1** - **6** for 3 seconds.
8. Press any one button of **1** to **6** to go back to any previously stored station..
9. While playing the radio, press **BAND** to switch the band FM I/FM II/FM III/AM I/AM II .

READER OPERATION

1. Turn on the power, press **SOURCE** button to select the DVD/VCD function.
2. Press **DSPL SET** to display or hide the time track.

① Current time ③ Playing track
② Current playing time

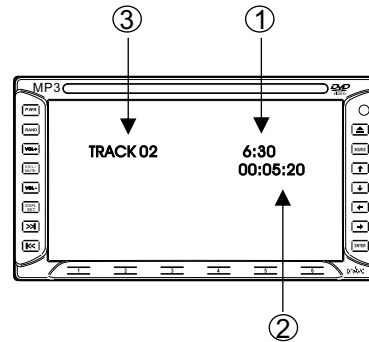

3. Put DVD, VCD, CD or MP3 disc into the player.
4. Press **▶/||** to play the video or music.
5. Press **■** to pause or stop playing.
6. Press **◀◀** to the last section of the track .
7. Press **▶▶** to the next section of he track.
8. Press **TITLE** button to play the disc from the beginning (effective for DVD/VCD).
9. Press **MENU** button to play MENU (effective for DVD/VCD).
10. Press **▲** button to take out the disc.
11. During CD or VCD playing, press **▶/||** the button for 3 seconds can be used to switch among MONO→LEFT→MONO-RIGHT→MIX-MONO→STEREO, pressing and holding the button will switch between them.

CD CHANGER MENU OPERATION

Note: Depends on your optional cd changer model, the following function may be a little bit different or is not supported.

1. Press **MENU** to start the menu.
2. Press **↑** / **↓** to select different function.
3. Press **ENTER** to execute function.
4. Press **MENU** to exit menu.
5. GO TO DISC N to jump directly to designated disc.
6. REPEAT to play the disc repeatedly.
7. SCAN to play shortly the initial of each song.
8. RANDOM to play the song randomly.

OSD OPERATION

A Set up the time.

1. Press **DISP/SET** to enter setup menu.
2. Press **1** to set up time.
3. Press **↑** / **↓** to move the optical rod.
4. Press **→** / **←** to adjust numeric value.
5. Press YEAR to adjust 2000 to 2099.
6. Select MONTH to adjust the month, 1 to 12.
7. Select DAY to adjust the date, 1 to 31.
8. Select HOUR to adjust time, 0 to 23.
9. Select MINUTE to adjust minute, 0 to 59.
10. Week is designed by the system automatically, it can not be adjusted.
11. Select TYPE to adjust the time format to be displayed (except the radio).

1 :	(A.D.)	yy/mm/dd	week	hour/minute
2 :		mm/dd	week	hour/minute
3 :		mm/dd		hour/minute
4 :			week	hour/minute
5 :				hour/minute
6 :		yy/mm/dd		hour/minute

12. Select SAVE and EXIT, press **ENTER** to store and exit.
13. Select EXIT or press **6** button, it will exit without saving.
14. During the saving process, if the date is set up wrong, it will be unable to exit, please modify and try it again. .

B VIDEO setup screen

1. Press **DISP/SET** to enter OSD setup, then press **2** button to enter setup screen.
2. Press **↑** / **↓** button to move the bright bar.
3. Press **→** / **←** to adjust numeric value.
4. Select CONTRAST to adjust the contrast.
5. Select COLOR to adjust color.
6. Select BRIGHT to adjust brightness.
7. Select TINT to adjust the tint.
8. Select MIRROR to reverse the screen in the left to right direction.
9. Select SCREEN to set up the screen display mode (the same as ASPECT).

NORMAL	4 : 3 screen
FULL	16 : 9 screen

10. Select DIMMER to set up night lamp mode. This reduces the amount of ambient light coming from the screen

OFF	WITHOUT DIMMER FONCTION
AUTO	DIMMER FONCTION

11. Select LCD OFF to set up **LCD Panel function or not** mode.
IF choose Auto at DIMMER Mode, THE LCD will be turned off automatically when there in no action on keypad during Raido function.

MANUAL	turn on and off LCD (Use ↑ button, please refer to general function descriptions).
--------	--

12. Select RESET to reset all the above settings to the default value.
13. Press **6** button to exit.

c AUDIO setup screen

1. Press **DSPSET** for 3 seconds to enter ON SCREEN DISPLAY (OSD) set up ,
Then press **3** button to enter setup screen.
2. Press **↑** / **↓** button to move the optical rod.
3. Press **→** / **←** to adjust numeric value.
4. Select RADIO to singly adjust the volume gain of the radio.
5. Select DVD to singly adjust the volume gain of the DVD player.
6. Select EXTERNAL to singly adjust the external volume input gain.
7. Select MUTE to turn on or off the speaker.
8. Select LOUDNESS to turn on or off the loudness control.
9. After pressing **6** button to exit, the default value will then be used.

※Depends on the machine model, this function might not be available for some models.

D DEVICE setting screen

A. Setting of the DVD player

1. When the DVD player is in use.
2. Press **[DSPLSET]** for 3 seconds, to enter OSD setting, then press **[4]** to set up.
3. Press **[↑]** to **[↓]** move the optical rod.
4. Press **[←]** to **[→]** execute the order.
5. Press **[ANGLE]** to select next angle (depends on different types of DVD, this function will be disabled if it is not DVD disc).
6. Select **ZOOM** to enlarge the screen.
7. Select to turn on **PBC** or turn off **PBC**.
8. Select **SHUFFLE** to turn on **SHUFFLE**.
9. Select **REPEAT AB** to start the **AB repeat** function.
10. Select **3D** to set up sound effect.
11. Press **[6]** button to exit.

B. Setting for Radio

1. When the radio is in use.
2. Press **[DSPLSET]** for 3 seconds to enter OSD setting, then press **[4]** to set up.
3. Press **[↑]** to **[↓]** move the optical rod.
4. Press **[←]** to **[→]** adjust the numeric value.
5. Press **[SENSITIVE]** to adjust the sensitivity of band search (1 weak Dx ~5 strong Lo). When weak is selected, it can automatically search all searchable bands, but if strong is selected, only bands of stronger signals will be searched.
6. Select **NARROW** to turn on and off the filtering function, when it is turned on, it can filter out neighboring interfered bands.
7. Press **[6]** button to exit.

C. Setting for CD changer

1. When the disc changer is in use.
2. Press **[DSPLSET]** to enter OSD setting, then press **[4]** to set up.
3. Press **[↑] / [↓]** to move the optical rod.
4. Press **[ENTER]** to execute the order.
5. Select **GO TO DISC X** to change " directly" to disc X.
6. Select other order is the same as a dedicated remote control, please refer to the operation manual of DVD disc changer.

REMOTE CONTROL OPERATION MANUAL

	POWER	Power switch	The same as POWER on the panel
	BAND	RADIO function	The same as BAND on the panel
	FUNC	DVD or EXTERNAL function	The same as FUNC on the panel
	MUTE	Speaker mute	
	VOL ▲	Increase the volume	The same as VOL+ on the panel
	AUDIO	Adjust and switch the volume function	The same as SEL on the panel
	VOL ▼	Decrease the volume	The same as VOL- on the panel
	TUNE▲	select band in the radio mode or disc change in the disc changer	The same as TUNE ▲
	TUNE▼	Adjust the image setting	The same as TUNE ▼
	VIDEO	Adjust the image setting	Long press on MENU
	1	Fast selection of radio band	The same as panel 1
	2	Fast selection of radio band	The same as panel 2
	3	Fast selection of radio band	The same as panel 3
	4	Fast selection of radio band	The same as panel 4
	5	Fast selection of radio band	The same as panel 5
	6	Fast selection of radio band	The same as panel 6
	7		
	8		
	9		
	0		
DISP/CLOCK	Switch or setting of time display Screen display mode switch	The same as TIME on the panel Can be adjusted in VIDEO setting	
ASPECT			
TITLE	Jump to DVD TITLE	The same as TITLE on the panel	
SUBTITLE	Language Selection		
ENTER/SAVE	DVD/MENU ENTER	The same as ENTER on the panel	
◀◀	Last section	The same as ◀◀ on the panel	
▶▶	Next section	The same as ▶▶ on the panel	
◀◀	Reward	The same as ◀◀, for a long press.	
▶▶	Forward	The same as ▶▶, for a long press.	
▶/ 	Play or pause	The same as PLAY	
■	Pause or stop	The same as STOP on the panel	
REPEAT	Play repeatedly	The same as RPT on the panel	

OTHER BUTTONS OPERATION

- Press or button for 3 seconds to display or not display to LCD (Volume will not be affected).
- Press panel button **PWR** and together to RESET the system (the setup values will not be affected).

CCD BACK UP CAMERA 《OPTIONAL》

A. Installation


1. The Green camera trigger wire must be connected to the car reverse wire. (This is usually found on the rear tail lights and shows a positive 12 volt signal when vehicle is in reverse)
2. The CCD Back up Camera must be connected to "CCD IN" on the back of the machine, which is a yellow RCA connector.

B. Operation

1. When installed correctly, the screen will automatically show the camera image while the vehicle is in reverse gear.
2. While the vehicle is in reverse, this will supersede what ever is on the display.


PROFESSIONAL INSTALLATION IS HIGHLY RECOMENED

BASIC INSTALLATION

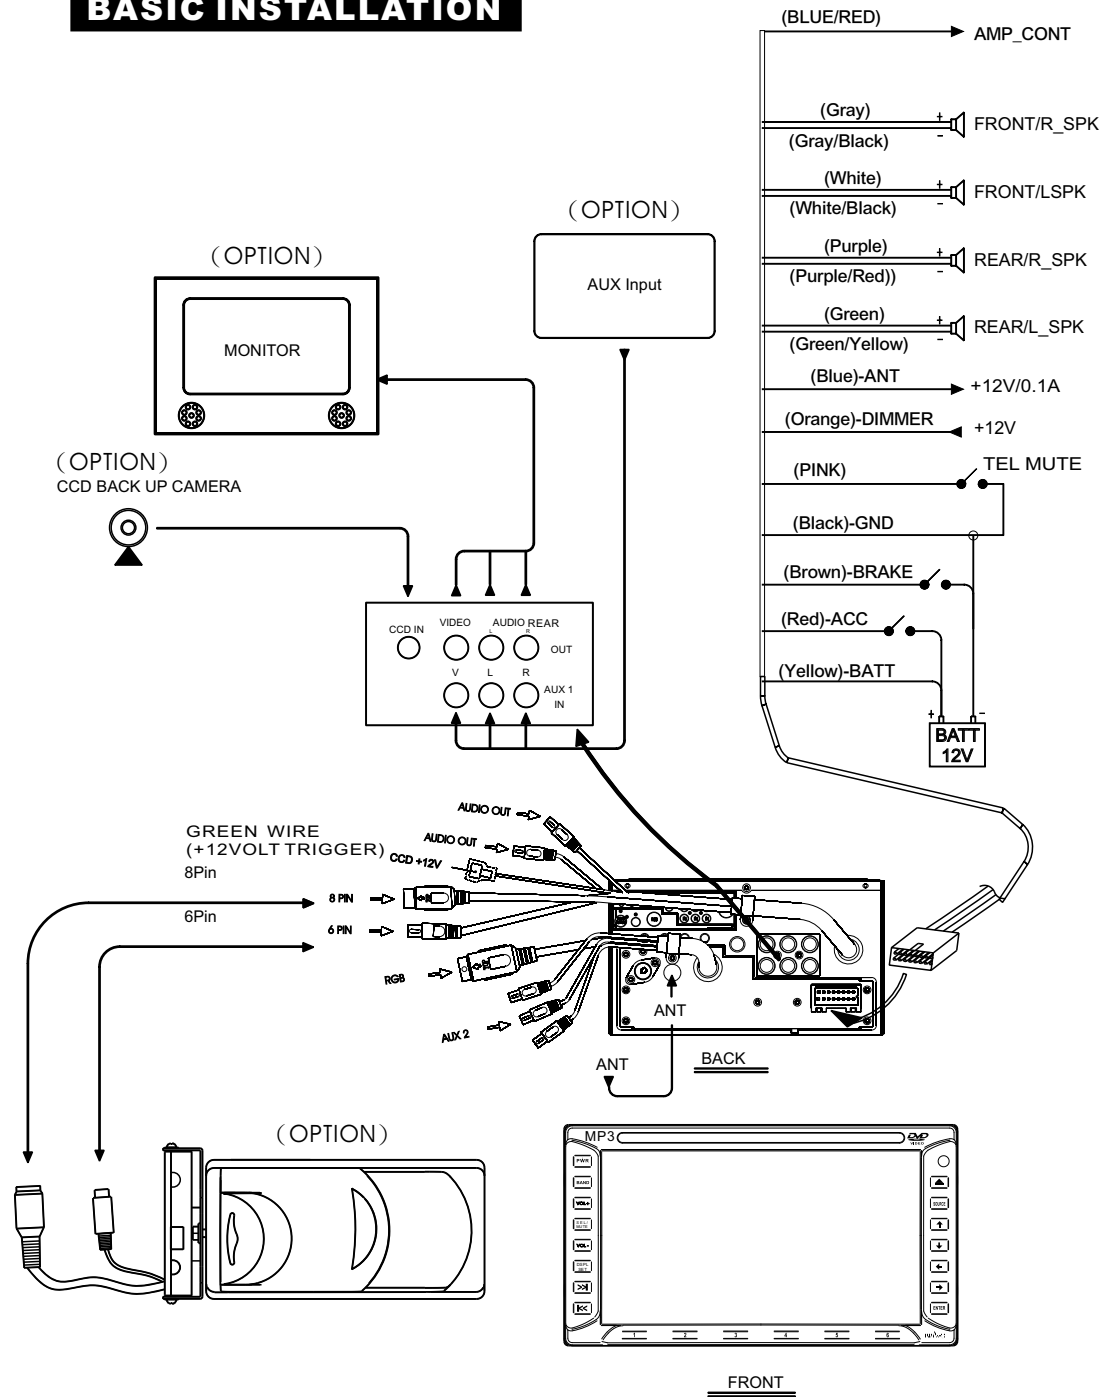


INSTALLATION INSTRUCTION


1. Remove Car Stereo panel cover.

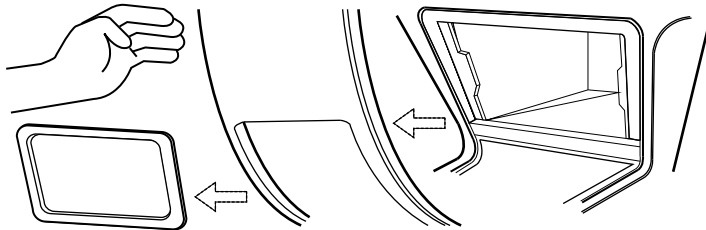


2. Use M4*8mm screws (total 8) mount left and right bracket on the unit left and right side. Please screw on (as the pictures) and make sure the balances.

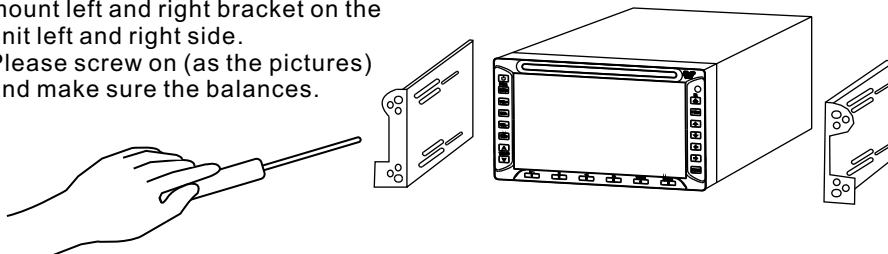

3. Connect all signal cables, put the unit back and screw on.



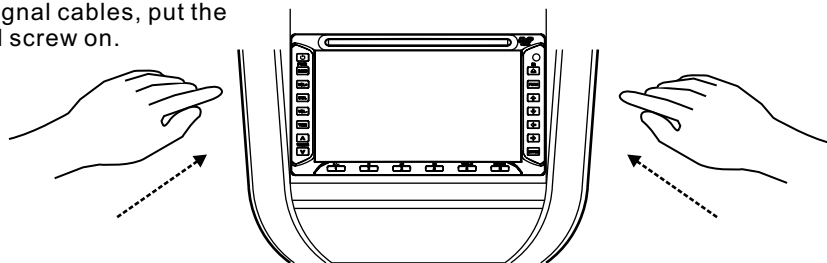


4. Put the Car Stereo panel cover back.

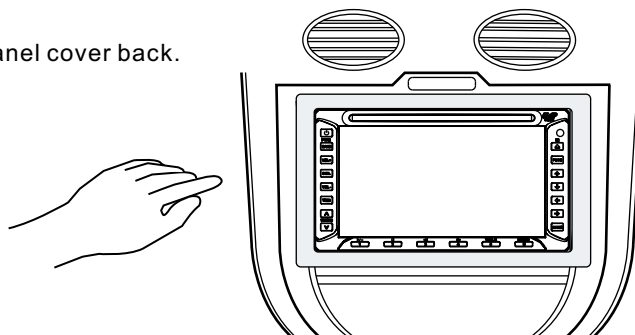

ACCESSORIES

1. IND-2065(Car Stereo)
2. Screws
3. Remove Control
4. Frame
5. Cables
6. Bracket (Left / Right)2 pcs
7. User's Manual

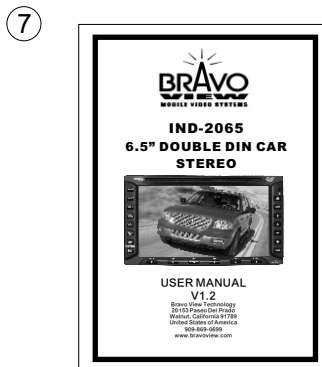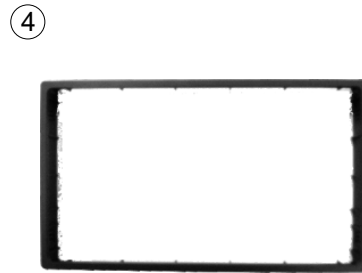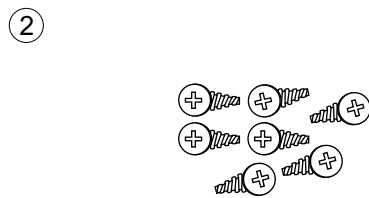

Limited Warranty

Bravo View Technology warrants this product (including any accessories and/or cables) against defects in material or workmanship as follows:

- 1. Labor. For a period of 1 Year from original date of purchase, if the product is determined to be defective, Bravo View will repair or replace the product at no charge.**
- 2. Parts. For a period of 1 Year from original date of purchase, Bravo View will at no charge, replace with new or rebuilt parts in exchange for defective parts. The warranty will either continue from date of original purchase or 90 days from repair (Which ever is longer).**
- 3. Bravo View Technology does not cover the cost of installation/removal of the product.**

To obtain warranty service, you must contact Bravo View Technologies for a Return Authorization Number (RA#). 866-40-BRAVO

This warranty does not cover customer misuse, improper installation, poor signal (including any “noise”), cosmetic damage, damage due by accident, abuse, negligence, commercial use, and improper operation.

Proof of Purchase in the form of a copy of a bill of sale or copy of receipted invoice, which shows clearly the sale of the unit, is required.

Repair or Replacement as provided under this warranty is the exclusive remedy of the consumer. Bravo View Technology shall not be liable for any incidental or consequential damages for breach of any express or implied warranty on this product. In no event shall Bravo View Technology be liable for any incidental or consequential damages whatsoever arising out of the use or inability to use the product. Under no circumstance shall Bravo View Technology's liability exceed the purchase price paid for the product. Except to the extent prohibited by applicable law, any implied warranty or merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty.